

4247 Printer  
Models 001, 002 with Coaxial Attachment



# Quick Reference Guide

# Configuration Menu Selection Chart

CATEGORIES	PARAMETERS / VALUES					
<b>Configuration Storage</b>	<b>Save Current Values</b>		<b>Recall Custom Set Values</b>		<b>Power-On Custom Set</b>	
	Custom Set A Custom Set B Custom Set C Custom Set D	Custom Set E Custom Set F Custom Set G Custom Set H	Custom Set A Custom Set B Custom Set C Custom Set D	Custom Set E Custom Set F Custom Set G Custom Set H	* Last Used Custom Set A Custom Set B Custom Set C Custom Set D	Custom Set E Custom Set F Custom Set G Custom Set H
	<b>Power-On Paper Source</b>		<b>Recall Factory Defaults</b>			
	* Front Rear Bin 1 Bin 2	Bin 3 Manual Last Used	Yes			
<b>Attachment</b>	* Coax Parallel					
<b>Rear Tractor Use</b>	* Push Pull Push-Pull					
<b>Coax Configuration</b>	<b>Characters per Inch (CPI)</b>		<b>Lines per Inch (LPI)</b>		<b>Single/Double Space</b>	
	* 10 12 15 16.7		* 6 8		* Single Double	
	<b>Maximum Print Position (MPP)</b>		<b>Maximum Page Length (MPL)</b>		<b>Emulation Mode</b>	
	* 132 001 – 136 (at 10 CPI) 163 (at 12 CPI) 204 (at 15 CPI) 227 (at 16.7 CPI)		* 066 001 – 660 (at 6 LPI) 880 (at 8 LPI)		* 4247 4224 4230 3287 3268	
	<b>Print Quality</b>		<b>Print Language</b>		<b>Mono/Dual Case</b> (Print Language Dependent)	
	* DP Quality DP Text Quality Near Letter Quality		* 37 USA/Canada/Canadian Bilingual ↑ ↓ 1097 Farsi		* Dual Mono	
	<b>Print Text Direction</b> (Print Language Dependent)		<b>Media Size Priority (IPDS only)</b>			
	* Right to Left Left to Right		Standard * Alternate			
	<b>Printer Compatibility Screen Buffer Size</b>		<b>Printer Compatibility 1 Carriage Return at MPP + 1</b>		<b>Printer Compatibility 2 New Line at MPP + 1</b>	
	960 * 1920 2560 3440 3564		* Standard Alternate		* Standard Alternate	
	<b>Printer Compatibility 3 Form Feed Followed by Data</b>		<b>Printer Compatibility 4 Form Feed is Last Character in Order</b>		<b>Printer Compatibility 5 Null Suppression</b>	
	* Standard Alternate		* Standard Alternate		* Standard Alternate	
	<b>Printer Compatibility 6 Form Feed Command Position</b>		<b>Printer Compatibility 7 Automatic Function after End of Print Buffer</b>		<b>Printer Compatibility 8 Automatic Function after OILC Job</b>	
	* Standard Alternate		* Standard Alternate		* Standard Alternate	
	<b>Printer Compatibility 9 Suppress Timeout of No Data Loss Intervention Required</b>		<b>Printer Compatibility Early Print Complete</b>		<b>Printer Compatibility 12 Automatic Function before Start of OILC Job</b>	
	* Standard Alternate		* Disabled Enabled		* Standard Alternate	
<b>Printer Compatibility Programmed Symbols</b>						
* Disabled Enabled						

\* Manufacturing Default

CATEGORIES	PARAMETERS / VALUES			
<b>Coax Configuration (Continued)</b>	<b>Bar Code Mode</b> (IPDS only)	<b>Graphics Mode</b> (IPDS only)		<b>Alarm Control</b>
	* High Low Computer Selected	* High Low Computer Selected		* Enabled Disabled
	<b>Programmed Symbols</b> (If enabled) <b>Plane Selection</b>	<b>Programmed Symbols</b> (If enabled) <b>Full Page on Skip Suppress</b>		<b>Programmed Symbols</b> (If enabled) <b>PS Print Direction</b>
	* 3 Single + 1 Triple 6 Single	* Standard Alternate		* Unidirectional Bidirectional
<b>Parallel Configuration</b>	<b>Characters per Inch (CPI)</b>	<b>Lines per Inch (LPI)</b>	<b>Maximum Print Position (MPP)</b>	<b>Maximum Page Length (MPL)</b>
	* 10 12 15 16.7 17.1 20	* 6 8	* 136 001 - 136 (at 10 CPI) 163 (at 12 CPI) 204 (at 15 CPI) 227 (at 16.7 CPI) 233 (at 17.1 CPI) 272 (at 20 CPI)	* 066 001 - 660 (at 6 LPI) 880 (at 8 LPI)
	<b>Emulation Mode</b>	<b>Print Language**</b>	<b>Print Language***</b>	<b>Print Quality**</b>
	* 4247 2381 Personal Printer 4202 Proprinter III XL Epson-FX	* 437 PC ↑↓ 1251 Cyrillic Windows	* 0 USA ↑↓ 1251 Cyrillic Windows	* DP Quality DP Text Quality Near Letter Quality OCR-A OCR-B
	<b>Print Quality***</b>	<b>NLQ Typeface**</b>	<b>Character Set</b>	
	* DP Quality Courier Gothic OCR-A OCR-B	* Courier Gothic	* PC1 PC2 Italics (Epson only)	
	<b>Printer Compatibility 3 Automatic LF on CR †</b>	<b>Printer Compatibility 4** Automatic CR on LF</b>	<b>Printer Compatibility 5** Form Feed Suppression</b>	<b>Printer Compatibility 6 Init †</b>
	Enabled * Disabled	Enabled * Disabled	Enabled * Disabled	* Enabled Disabled
	<b>Printer Compatibility 7** Condensed Print</b>	<b>Printer Compatibility 8 Slashed Zero †</b>	<b>Printer Compatibility 9** 20 CPI</b>	
	15 16.7 * 17.1	Enabled * Disabled	* Enabled Disabled	
	<b>Alarm Control</b>	<b>Interface Type</b>	<b>Input Buffer Size</b>	<b>Select-In Signal***</b>
	* Enabled Disabled	* PC Parallel 1284 Parallel	256 2K 12K * 32K 64K	* Enabled Disabled
	<b>AutoFeed XT***</b>			
Enabled * Disabled				

\* Manufacturing Default

\*\* When Emulation Mode is set to 4247, 4202 III XL, or 2381 Personal Printer

\*\*\* When Emulation Mode is set to Epson-FX

† When Emulation Mode is set to Epson-FX, only Compatibility Options 3, 6, and 8 are available.

CATEGORIES	PARAMETERS / VALUES			
<b>Printer Setup</b>	<b>Paper Source</b>	<b>ASF Default Bin</b>	<b>ASF Bin 1 Media</b>	<b>ASF Bin Linking</b>
	* Front Rear Bin 1 Bin 2 Bin 3 Manual	* Bin 1 Bin 2 Bin 3	* Paper Envelope	* Disabled Bin 1+2 Bin 1+2+3 Bin 2+3
	<b>Front Forms Backup</b>	<b>Rear Forms Backup</b>	<b>Continuous Forms Linking</b>	<b>Form Feed Mode</b>
	* Enabled Disabled	* Enabled Disabled	Enabled * Disabled	* Not Active in Ready State Active in Ready State
	<b>Automatic Eject</b>	<b>Automatic Restore</b>	<b>Continuous Forms Eject Mode</b>	<b>Manual Paper Overlay</b>
	Enabled * Disabled	* Disabled Data Timer (10 Seconds) Timer (20 Seconds) Timer (30 Seconds) Timer (40 Seconds) Timer (50 Seconds)	* Immediate Eject Delayed Eject	Enabled * Disabled
	<b>Automatic Manual Load</b>	<b>Manual Feed Eject Mode</b>	<b>Bar Code Print Direction</b>	<b>Graphics Print Direction</b>
	* Enabled Disabled	* Top of Form Automatic Top of Form	Bidirectional * Unidirectional	Bidirectional * Unidirectional
	<b>Perforation Safety</b>	<b>Jam Sensors</b>		
Enabled * Disabled	* Enabled Disabled			
<b>Printer Adjustment</b>	<b>Front AFTA</b>	<b>Front Tear Position</b>	<b>Front Left Margin Alignment</b>	<b>Front Paper Load Position</b>
	* 0 -5 to +3 Fixed 1 to 8	* 0 -312 to +24	* 10 0 to 60	* 0 -24 to +288
	<b>Rear AFTA</b>	<b>Rear Tear Position</b>	<b>Rear Left Margin Alignment</b>	<b>Rear Paper Load Position</b>
	* 0 -5 to +3 Fixed 1 to 8	* 0 -312 to +24	* 10 0 to 60	* 0 -24 to +288
	<b>ASF Bin 1 AFTA</b>	<b>ASF Bin 1 Left Margin Alignment</b>	<b>ASF Bin 1 Paper Load Position</b>	<b>ASF Bin 2 AFTA</b>
	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60	* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8
	<b>ASF Bin 2 Left Margin Alignment</b>	<b>ASF Bin 2 Paper Load Position</b>	<b>ASF Bin 3 AFTA</b>	<b>ASF Bin 3 Left Margin Alignment</b>
	* 10 0 to 60	* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60
	<b>ASF Bin 3 Paper Load Position</b>	<b>Manual Feed AFTA</b>	<b>Manual Feed Left Margin Alignment</b>	<b>Manual Feed Paper Load Position</b>
* 0 -24 to +576	* 0 -5 to +3 Fixed 1 to 8	* 10 0 to 60	* 0 -24 to +576	
<b>Power On Reset</b>	Yes			
<b>Display Language</b>	* 000 English ↑↓ 010 Suomi			
<b>Send Buffer Reprint Code</b>	Yes * No			
<b>Vital Product Data</b>	<b>Serial Number</b>	<b>Device Specific Information</b>		
	XXXXXXX	XXXXXXXXXXXXXXXXXX		
<b>Quit from Menu</b>	Restore Previous Values			

\* Manufacturing Default

## Changing a Value on the Configuration Menu

1. Press **Stop**. The printer becomes *not ready*.
2. Press **Menu** to display the CONFIGURATION MENU on the operator panel display.
3. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Category you want.
4. Press **Enter** to select that Category.
5. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Parameter you want.
6. Press **Enter** to select that Parameter.
7. Press **Scroll Up**↑ or **Scroll Down**↓ until you find the Value you want.
8. Press **Enter** to select a new Value. An asterisk (\*) appears to indicate the new current Value.
9. To return to the CONFIGURATION MENU, press **Return** to return to the Parameter level, and then press **Return** again.
10. To save changes to a Custom Set, return to the CONFIGURATION MENU. Select Configuration Storage. Select Save Current Values. Select a Custom Set.
11. To return the printer to *ready* from any level, press **Start**.

## Custom Set in Use Indicator

READY	<X>
-------	-----

The current custom set in use is displayed in parentheses <X>.

Where <X> can be:

- A** (Custom Set A in use)
- C** (Custom Set C in use)
- B** (Custom Set B in use)
- D** (Custom Set D in use)
- E** (Custom Set E in use)
- F** (Custom Set F in use)
- G** (Custom Set G in use)
- H** (Custom Set H in use)

If a change was made in the Configuration Menu and not saved in a custom set, then the change is static and a **blank <>** is displayed in the parentheses.

## Operator Print Tests

TEST	DESCRIPTION
<b>Quick Reference</b>	Print pages to show operator panel keys and configuration menu.
<b>Printer Demonstration</b>	Print pages showing available highlighting, print speeds, print qualities, text placements, and bar codes.
<b>Printer Configuration</b>	Print page showing current values for printer parameters.
<b>Firmware Information</b>	Print page to verify code version in your printer.
<b>Printer Adjustments</b>	Set and verify current adjustment parameters for the printer.

## Key Description

KEY LABEL	DESCRIPTION
<b>Menu</b>	Enter the CONFIGURATION MENU.
<b>Quiet</b>	Reduces the printer noise level and the throughput of the printer.
<b>Micro</b> ↑ <b>Scroll</b> ↑	Move the form up 1/144 of an inch, or view the previous Menu item.
<b>Micro</b> ↓ <b>Scroll</b> ↓	Move the form down 1/144 of an inch, or view the next Menu item.
<b>PA1</b> <b>Enter</b>	Send a PA1 Request to the host computer or select the current Menu item or begin a Test.
<b>PA2</b> <b>Return</b>	Send a PA2 Request to the host computer or return to the previous Menu level.
<b>Hex Print</b>	Put the printer in Hex Print mode.
<b>Park/</b> <b>Path</b>	Moves continuous forms out of the print area in Front Push, Rear Push, and Push-Pull modes, ejects the continuous forms in Rear Pull mode, or ejects cut-sheet forms in ASF or Manual Sheet modes, or selects the paper path.
<b>Line Feed</b>	Advance the form one print line, as defined by the current Lines Per Inch (LPI) setting.
<b>Load/</b> <b>Eject</b>	Load form to the top of form position, eject form to the tear-off position, or eject the last form.
<b>Form</b> <b>Feed</b>	Advance the form to the next top of form position. (Not active for ASF and Manual Sheet modes)
<b>Set Top</b> <b>of Form</b>	Set the top of form position to the current location on the form. (Not active for ASF and Manual Sheet modes)
<b>Start</b>	Change the display from NOT READY to READY, exit the CONFIGURATION MENU, or begin a Test.
<b>Stop</b>	Change the display from READY to NOT READY, clear errors, turn off the alarm, or stop a Test.
<b>Cancel</b> <b>Print</b>	Send a Cancel Request to the host computer or stop a Test and return to READY.
<b>Test</b>	Enter the OPERATOR PRINT TESTS menu.





Part Number: 63H6154



Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

SA24-4409-01



63H6154

