

# IBM System Storage Multilevel Grid Access Manager v2.1.3

## IBM Storage and Server Interoperability Matrix

**Last update: October 20, 2010**

Unless otherwise specified, the product manufacturer, supplier, or publisher of non-IBM products provides warranty, service, and support directly to you. IBM makes no representations or warranties regarding non-IBM products.

The inclusion of an IBM or non-IBM product on an interoperability list is not a guarantee that it will work with the designated IBM storage product. In addition, not all software and hardware combinations created from compatible components will necessarily function properly together. The following list includes products developed or distributed by companies other than IBM. IBM does not provide service or support for the non-IBM products listed, but does not prohibit them from being used together with IBM's storage products. During problem debug and resolution, IBM may require that hardware or software additions be removed from the IBM product to provide problem determination and resolution on the IBM-supplied hardware/ software. For support issues regarding non-IBM products, please contact the manufacturer of the product directly. IBM does not warrant either functionality or problem resolution of any non-IBM products.

This information could include technical inaccuracies or typographical errors. IBM does not assume any liability for damages caused by such errors as this information is provided for convenience only; the reader should confirm any information contained herein with the associated vendor.

Changes are periodically made to the content of the document. These changes will be incorporated in new editions of the document. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this document at anytime without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

# Table of Contents

TABLE OF CONTENTS .....	1
HARDWARE SUPPORT POLICY .....	1
IBM BLADECENTER CONFIGURATIONS .....	2
BLADECENTER CHASSIS .....	3
<i>BladeCenter Hardware/Firmware</i> .....	3
ADMIN NODE .....	4
<i>Software</i> .....	4
<i>Blade Hardware/Firmware</i> .....	4
<i>Storage Options</i> .....	5
ADMIN/GATEWAY NODE .....	6
<i>Software</i> .....	6
<i>Blade Hardware/Firmware</i> .....	6
<i>Storage Options</i> .....	7
ARCHIVE NODE .....	8
<i>Software</i> .....	8
<i>Blade Hardware/Firmware</i> .....	8
<i>Storage Options</i> .....	8
CONTROL NODE .....	9
<i>Software</i> .....	9
<i>Blade Hardware/Firmware</i> .....	9
<i>Storage Options</i> .....	10
CONTROL/STORAGE NODE .....	11
<i>Software</i> .....	11
<i>Blade Hardware/Firmware</i> .....	11
<i>Storage Options</i> .....	12
GATEWAY NODE - HIGH AVAILABILITY .....	13
<i>Software</i> .....	13
<i>Blade Hardware/Firmware</i> .....	13
<i>Storage Options</i> .....	14
GATEWAY NODE - REDUNDANT .....	15
<i>Software</i> .....	15
<i>Blade Hardware/Firmware</i> .....	15
<i>Storage Options</i> .....	16
STORAGE NODE .....	17
<i>Software</i> .....	17
<i>Blade Hardware/Firmware</i> .....	17
<i>Storage Options</i> .....	18
IBM SYSTEM X CONFIGURATIONS .....	19
ADMIN NODE .....	20
<i>Software</i> .....	20
<i>Server Hardware/Firmware</i> .....	20
<i>Storage Options</i> .....	21
ADMIN/GATEWAY NODE .....	22
<i>Software</i> .....	22
<i>Server Hardware/Firmware</i> .....	22
<i>Storage Options</i> .....	23
ADMIN/GATEWAY NODE WITH EXTERNAL DISK FOR FSG CACHE .....	24
<i>Software</i> .....	24
<i>Server Hardware/Firmware</i> .....	24

<i>Storage Options</i> .....	25
ADMIN/GATEWAY/CONTROL/STORAGE NODE (GMAS-L ONLY) .....	26
<i>Software</i> .....	26
<i>Server Hardware/Firmware</i> .....	26
<i>Storage Options</i> .....	27
ARCHIVE NODE.....	28
<i>Software</i> .....	28
<i>Server Hardware/Firmware</i> .....	28
<i>Storage Options</i> .....	29
CONTROL NODE.....	30
<i>Software</i> .....	30
<i>Server Hardware/Firmware</i> .....	30
x3550_M2/.....	30
<i>Storage Options</i> .....	31
CONTROL/STORAGE NODE.....	32
<i>Software</i> .....	32
<i>Server Hardware/Firmware</i> .....	32
<i>Storage Options</i> .....	33
GATEWAY NODE – HIGH AVAILABILITY .....	34
<i>Software</i> .....	34
<i>Server Hardware/Firmware</i> .....	34
<i>Storage Options</i> .....	35
GATEWAY NODE WITH EXTERNAL DISK FOR FSG CACHE – HIGH AVAILABILITY.....	36
<i>Software</i> .....	36
<i>Server Hardware/Firmware</i> .....	36
<i>Storage Options</i> .....	37
GATEWAY NODE - REDUNDANT.....	38
<i>Software</i> .....	38
<i>Server Hardware/Firmware</i> .....	38
<i>Storage Options</i> .....	39
GATEWAY NODE WITH EXTERNAL DISK FOR FSG CACHE – REDUNDANT .....	40
<i>Software</i> .....	40
<i>Server Hardware/Firmware</i> .....	40
<i>Storage Options</i> .....	41
GATEWAY/CONTROL/STORAGE NODE (GMAS-L ONLY).....	42
<i>Software</i> .....	42
<i>Server Hardware/Firmware</i> .....	42
<i>Storage Options</i> .....	43
STORAGE NODE.....	44
<i>Software</i> .....	44
<i>Server Hardware/Firmware</i> .....	44
<i>Storage Options</i> .....	45
APPENDIX A – IBM SYSTEM STORAGE DS3200 STORAGE OPTION .....	46
APPENDIX B – IBM SYSTEM STORAGE DS3400 STORAGE OPTION .....	47
APPENDIX C – IBM SYSTEM STORAGE DS3500 STORAGE OPTION .....	48
APPENDIX D – IBM SYSTEM STORAGE DS4000 STORAGE OPTION .....	49
APPENDIX E – IBM SYSTEM STORAGE DS5100/DS5300 STORAGE OPTION .....	50
APPENDIX F – IBM XIV STORAGE SYSTEM OPTION.....	51

## Hardware Support Policy

This policy determines the length of time we will test a given piece of hardware with new levels of GAM code:

- o Hardware interoperability introduced in any release of GAM will remain current and be tested for software upgrades for all new releases of GAM for at least three years. For example, hardware which first appears in this interoperability matrix in January 2007 will be tested for all releases of GAM in 2007, 2008, and 2009. Hardware that is still shipping and current will continue to be tested beyond this commitment.
- o Hardware interoperability will be supported at the last tested software level, until the hardware's end of support date –or– Bycast's end of support for that software level or interoperability of that software level with the level of grid software the customer is running on other nodes. What this means is that a piece of hardware introduced in GAM version n which we do not test in GAM version n+3 (three releases after GAM version n) will nevertheless be supported running GAM n+2 for as long as Bycast supports GAM n+2, and there is still underlying hardware support available for the device.
- o NOTE: Bycast currently supports interoperability of different software levels in the same grid only during an upgrade.

For example:

2007 = GAM n = hardware XYZ introduced

2008 = GAM n+1 = hardware XYZ retested, customer can upgrade GAM SW on existing HW

2009 = GAM n+2 = hardware XYZ retested, customer can upgrade GAM SW on existing HW

2010 = GAM n+3 = hardware XYZ NOT retested, but customer can continue to run on GAM n+2 SW on hardware XYZ for as long as GAM n+2 SW is supported by Bycast and hardware XYZ is supported by the hardware supplier.

So if hardware XYZ was purchased in 2007 it would be supported on the latest GAM software version until GAM n+3 becomes generally available in 2010, and beyond that for as long as GAM n+2 software is supported by Bycast. Devices like tape are not directly supported by GAM; rather they fall under TSM's SW support cycle and GAM merely talks to TSM. Nevertheless, longer-lived devices GAM does directly talk to would continue to be tested with new releases as long as they are shipping and current.

## **IBM BladeCenter Configurations**

## **BladeCenter Chassis**

### **BladeCenter Hardware/Firmware**

#### BladeCenter H Chassis

2 Multi-switch Interconnect Module for IBM BladeCenter

#### Ethernet Connectivity Options

Server Connectivity Module for IBM BladeCenter

Cisco Systems Intelligent GbE Switch Module for IBM BladeCenter

Cisco Systems Fiber Intelligent Gigabit Ethernet Switch Module

2 modules requires for all configurations

2 additional modules (total of 4) are required if any of the following node types will be installed in the chassis:

Admin Node

Admin/Gateway Node

Archive Node (only if node is communication with a TSM/SSAM server not on the grid network)

Gateway Node - High Availability

Gateway Node - Redundant

#### Fibre Channel Connectivity Options

2 Brocade 8GB SAN Switch Module for IBM BladeCenter

2 Cisco Systems 4GB Fibre Channel Switch Module

NOTE - the switch modules installed in the chassis must be a Vendor match to any external switch they will be connected to

NOTE - a sufficient number of SFPs are required for connection of external storage and/or ISLs

#### 4 Power Supply Modules

2 IBM BladeCenter KVM/Advanced Management Module

Advanced Management Module Firmware

bpet54l

Brocade 8GB SAN Switch Module Firmware

v6.3.1b

Cisco Systems 4GB SAN Switch Module Firmware

v3.3.2/v4.2.3/v5.0.1a

QLogic 8GB SAN Switch Module Firmware

v7.10.1.04.00

Server Connectivity Module Firmware

v1.1.3.0

Cisco Systems Intelligent GbE Switch Module

v12.2-55.SE

Cisco Systems Fibre Intelligent Gigabit Ethernet Switch Module

v12.2-55.SE

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter H Chassis

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_H\\_Chassis](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_H_Chassis)

## **Admin Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Admin node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter  
IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery  
2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array
- 2 300GB 15k FC or SAS HDDs, configured as a RAID 1 array on supported external storage for Audit Logs and the NMS DB

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E



## **Admin/Gateway Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Admin/Gateway node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz
- 4GB RAM
- QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter
- IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery
- 2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array
- 2 300GB 15k FC or SAS HDD, configured as a RAID 1 array on supported external storage for Audit Logs and the NMS DB
- 2-12 300GB 15k FC or SAS HDD (in increments of two), configured as a RAID 1/RAID10 array on supported external storage for the FSG Cache

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E

## **Archive Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1
IBM TSM/SSAM Client Software	v5.5 or v6.1

### **Blade Hardware/Firmware**

The Archive node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz
- 4GB RAM
- QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter (required only if node is communicating with a TSM/SSAM server not on the grid network)
- IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery
- 2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

### **Storage Options**

IBM TSM Server	v5.5 or later
IBM SSAM	v5.5 or later

## **Control Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Control node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz
- 4GB RAM
- QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter
- IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery
- 2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array
  
- 4 300GB 15k FC or SAS HDD, configured as a RAID 10 array on supported external storage for the CMS DB

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E

## **Control/Storage Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Control/Storage node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz
- 4GB RAM
- QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter
- IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery
- 2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array
  
- 4 300GB 15k FC or SAS HDD, configured as a RAID 10 array on supported external storage for the CMS DB

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E

## **Gateway Node – High Availability**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60–0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60–0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504–1

### **Blade Hardware/Firmware**

The Gateway node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM

QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter  
IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery  
2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array

4–12 300GB 15k FC or SAS HDD (in increments of two), configured as a RAID 10 array  
on supported external storage for the FSG Cache

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1–0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06–b2.09–e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)



## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E

## **Gateway Node - Redundant**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Gateway node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM

QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter  
IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery  
2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array

4-12 300GB 15k FC or SAS HDD (in increments of two), configured as a RAID 10 array  
on supported external storage for the FSG Cache

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E

## **Storage Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Blade Hardware/Firmware**

The Storage node is supported when installed on the IBM BladeCenter HS22 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
QLogic Ethernet and 8Gb Fibre Channel Expansion Card (CFFh) for IBM BladeCenter  
IBM ServeRAID-MR10ie (CIOv) Controller for IBM BladeCenter with Battery  
2 73GB SAS 15k 2.5 inch SFF Slim-HS HDD, configured as 1 RAID 1 array

IBM BladeCenter HS22 UEFI	v1.09 or later
IBM BladeCenter HS22 IMM Firmware	v1.14 or later
ServeRAID MR10ie Firmware	v11.0.1-0024
ServeRAID MR10ie Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Firmware	vf5.03.06-b2.09-e2.27 or later
QLogic Ethernet and 8GB Fibre Channel Expansion Card (CFFh) Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM BladeCenter HS22

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter\\_HS22/7870/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/BladeCenter/BladeCenter_HS22/7870/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix B  
Appendix C  
Appendix D  
Appendix E  
Appendix F

## **IBM System X Configurations**

## **Admin Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Admin node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
4 73GB 15K 2.5 inch Slim Hot-Swap SAS HDD, configured as two RAID 1 arrays  
2 146GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Not Applicable



## **Admin/Gateway Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Admin/Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15K 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 arrays  
4 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as two RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Not Applicable

## **Admin/Gateway Node with External Disk for FSG Cache**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Admin/Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
4 73GB 15K 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 arrays  
2 146GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as two RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

2-12 300GB 15k SAS HDD (in increments of two), configured as a RAID 1/RAID 10 array on supported external storage for the FSG Cache

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage Multilevel Grid Access Manager v2.1.3  
IBM Storage and Server Interoperability Matrix

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Appendix A  
Appendix B  
Appendix C

## **Admin/Gateway/Control/Storage Node (GMAS-L only)**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Admin/Gateway/Control/Storage node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
6 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array and one RAID 10 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

2 450GB 15k SAS HDD, configured as a RAID 1 array on supported external storage for the FSG Cache

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage Multilevel Grid Access Manager v2.1.3  
IBM Storage and Server Interoperability Matrix

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix A

## **Archive Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1
IBM TSM/SSAM Client Software	v5.5 or v6.1

### **Server Hardware/Firmware**

The Archive node is supported when installed on the IBM System X x3550 M2 with the following minimum configuration:

- 1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz
- 4GB RAM
- Dual port 1Gb Ethernet Daughter Card (only required if node is communicating with a TSM/SSAM server not on the grid network)
- Storage Adapter Card – refer to the Storage Options section below for specifics
- Internal RAID options
  - IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option
  - IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option
- 2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array
- Dual Power Supplies

Optional Supported Components  
Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

### **Storage Options**

IBM TSM Server  
IBM SSAM

v5.5 or later  
v5.5 or later



## **Control Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Control node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM

Internal RAID options

IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option

IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option

2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array

4 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 10 array

Dual Power Supplies

Optional Supported Components

Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Not Applicable

## **Control/Storage Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Control/Storage node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
4 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 10 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix A  
Appendix B  
Appendix C  
Appendix D  
Appendix E  
Appendix F

## **Gateway Node – High Availability**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
1 PRO/1000 PT Dual Port Server Adapter by Intel – PCI-E  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
4 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Not Applicable

## **Gateway Node with External Disk for FSG Cache – High Availability**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
1 PRO/1000 PT Dual Port Server Adapter by Intel – PCI-E  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

4-12 300GB 15k SAS HDD (in increments of two), configured as a RAID 10 array on supported external storage for the FSG Cache

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage Multilevel Grid Access Manager v2.1.3  
IBM Storage and Server Interoperability Matrix

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Appendix A  
Appendix B  
Appendix C



## **Gateway Node - Redundant**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
4 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Not Applicable

## **Gateway Node with External Disk for FSG Cache – Redundant**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Gateway node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

4-12 300GB 15k SAS HDD (in increments of two), configured as a RAID 10 array on supported external storage for the FSG Cache

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage Multilevel Grid Access Manager v2.1.3  
IBM Storage and Server Interoperability Matrix

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Appendix A  
Appendix B  
Appendix C

## **Gateway/Control/Storage Node (GMAS-L only)**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Gateway/Control/Storage node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Dual port 1Gb Ethernet Daughter Card  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
6 300GB 10k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array and one RAID 10 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

2 450GB 15k SAS HDD, configured as a RAID 1 array on supported external storage for the FSG Cache

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage Multilevel Grid Access Manager v2.1.3  
IBM Storage and Server Interoperability Matrix

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix A

## **Storage Node**

### **Software**

SUSE Linux Enterprise Server 10 SP3 Kernel	2.6.16.60-0.54.5
SUSE Linux Enterprise Server 10 SP2 Kernel	2.6.16.60-0.21
IBM System Storage Multilevel Grid Access Manager Software	v2.1.3_8.1.0
Bycast Enablement Layer Software	v3.5.0
IBM System Storage Multilevel Grid Access Manager Software Service Pack	v2.1.3.3_8.1.3
Bycast Enablement Layer Software Service Pack	v3.5.3
IBM Director Common Agent	v6.1
LSI MR Provider	v00.05.0504-1

### **Server Hardware/Firmware**

The Storage node is supported when installed on the IBM System X x3550 M2 with the minimum configuration below.

1 Quad-Core Intel Xeon Processor E5530 – 2.40GHz  
4GB RAM  
Storage Adapter Card – refer to the Storage Options section below for specifics  
Internal RAID options  
    IBM ServeRAID-MR10i SAS Controller with Li-Ion battery option  
    IBM ServeRAID- M5015 SAS Controller with Li-Ion battery option  
2 73GB 15k 2.5 inch Slim Hot-Swap SAS HDD, configured as one RAID 1 array  
Dual Power Supplies

Optional Supported Components  
    Remote present hardware key

IBM BladeCenter x3550 M2 UEFI	v1.08
IBM BladeCenter x3550 M2 IMM Firmware	v1.14
ServeRAID MR10i Firmware	v11.0.1-0024
ServeRAID MR10i Driver	00.00.04.17.1 or later
ServeRAID M5015 Firmware	V12.0.1-0097
ServeRAID M5015 Driver	00.00.04.17.1 or later
Broadcom NIC Firmware	v2.1.3c or later
Broadcom NIC Driver	V2.0.8e or later
IBM SAS Hard drive Update	v1.07.01 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System X x3550 M2

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System\\_x/System\\_x3550\\_M2/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/Systems/System_x/System_x3550_M2/)

## **Storage Options**

Refer to the following appendices for supported storage attachment options.

Appendix A  
Appendix B  
Appendix C  
Appendix D  
Appendix E  
Appendix F



## Appendix A – IBM System Storage DS3200 Storage Option

### IBM System Storage DS3200

Storage Adapter Options – IBM System X servers only

- 1 IBM 3Gb SAS HBA Controller v2 (for single controller configurations)
- 2 IBM 3Gb SAS HBA Controller v2 (for dual controller configurations)

IBM 3Gb SAS HBA Controller v2 Firmware	v2.71 or later
IBM 3Gb SAS HBA Controller v2 Driver	v4.22.80.03 or later
IBM System Storage DS3200 Firmware	07.35.57.00 or later
IBM System Storage DS3000 EXP3000 Firmware	v1.96 or later
IBM System Storage DS3000 RDAC <sup>1</sup>	v09.03.0c05.0331 or later
IBM System Storage DS3000 SAS/SATA Hard drive update	v4.7 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage DS3200

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Entry-level\\_disk\\_systems/DS3200/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Entry-level_disk_systems/DS3200/)

---

<sup>1</sup> Only required when using a dual controller configuration

## Appendix B – IBM System Storage DS3400 Storage Option

### IBM System Storage DS3400

Storage Adapter Options – IBM System X servers only  
1 QLogic 8GB FC Dual Port PCIe HBA

QLogic 8Gb FC Dual Port PCIe HBA Firmware	v2.01 or later
QLogic 8Gb FC Dual Port PCIe HBA Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM System Storage DS3400 Firmware	07.35.57.00 or later
IBM System Storage DS3000 EXP3000 Firmware	v1.96 or later
IBM System Storage DS3000 RDAC <sup>2</sup>	v09.03.0c05.0331 or later
IBM System Storage DS3000 SAS/SATA Hard drive update	v4.7 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage DS3400

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Entry-level\\_disk\\_systems/DS3400/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Entry-level_disk_systems/DS3400/)

---

<sup>2</sup> Only required when using a dual controller configuration

## Appendix C – IBM System Storage DS3500 Storage Option

### IBM System Storage DS3400

Storage Adapter Options – IBM System X servers only

- 2 IBM 3Gb SAS HBA Controller v2
- 1 QLogic 8GB FC Dual Port PCIe HBA

IBM 3Gb SAS HBA Controller v2 Firmware	v2.71 or later
IBM 3Gb SAS HBA Controller v2 Driver	v4.22.80.03 or later
QLogic 8Gb FC Dual Port PCIe HBA Firmware	v2.01 or later
QLogic 8Gb FC Dual Port PCIe HBA Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM System Storage DS3400 Firmware	07.70.16.01 or later
IBM System Storage DS3000 EXP3000 Firmware	v3.16 or later
IBM System Storage DS3000 RDAC	v09.03.0c05.0331 or later
IBM System Storage DS3000 SAS/SATA Hard drive update	v4.7 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage DS3500

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Entry-level\\_disk\\_systems/DS3500\\_%28DS3512,\\_DS3524%29](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Entry-level_disk_systems/DS3500_%28DS3512,_DS3524%29)

## Appendix D – IBM System Storage DS4000 Storage Option

### IBM System Storage DS4700 Express

Storage Adapter Options – IBM System X servers only  
1 QLogic 8GB FC Dual Port PCIe HBA

QLogic 8Gb FC Dual Port PCIe HBA Firmware	v2.01 or later
QLogic 8Gb FC Dual Port PCIe HBA Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM System Storage DS4700 Firmware	07.60.40.00 or later
IBM System Storage DS4000 EXP810 Firmware	v1.69 or later
IBM System Storage DS4000 RDAC	v09.03.0c05.0331 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage DS4700 Express

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Mid-range\\_disk\\_systems/DS4700\\_Express/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Mid-range_disk_systems/DS4700_Express/)

## Appendix E – IBM System Storage DS5100/DS5300 Storage Option

### IBM System Storage DS5100/DS5300

Storage Adapter Options – IBM System X servers only  
1 QLogic 8GB FC Dual Port PCIe HBA

QLogic 8Gb FC Dual Port PCIe HBA Firmware	v2.01 or later
QLogic 8Gb FC Dual Port PCIe HBA Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM System Storage DS5100/DS5300 Firmware	07.70.23.00 or later
IBM System Storage EXP5000 Firmware	v1.69 or later
IBM System Storage EXP810 Firmware	v1.69 or later
IBM System Storage DS5000 RDAC	v09.03.0c05.0331 or later

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM System Storage DS5100

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Mid-range\\_disk\\_systems/DS5100/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Mid-range_disk_systems/DS5100/)

IBM System Storage DS5300

[http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System\\_Storage/Disk\\_systems/Mid-range\\_disk\\_systems/DS5300/](http://www-947.ibm.com/support/entry/portal/Downloads/Hardware/System_Storage/Disk_systems/Mid-range_disk_systems/DS5300/)

## Appendix F – IBM XIV Storage System Option

### IBM XIV Storage System

Storage Adapter Options – IBM System X servers only  
1 QLogic 8GB FC Dual Port PCIe HBA

QLogic 8Gb FC Dual Port PCIe HBA Firmware	v2.01 or later
QLogic 8Gb FC Dual Port PCIe HBA Driver	SLES10 SP2 or SLES10 SP3 distribution driver or later
IBM XIV Storage System Code Level	v10.2.1b or later
SLES10 SP2 Device Mapper Multipath driver	SLES10 SP2 or SLES10 SP3 distribution version

For the latest support levels of hardware and firmware and to download the appropriate drivers and firmware, please review the following links

IBM XIV Storage System

[http://www-947.ibm.com/support/entry/portal/Troubleshooting/Hardware/System\\_Storage/Disk\\_systems/Enterprise\\_Storage\\_Servers/XIV\\_Storage\\_System\\_282810\\_281229/](http://www-947.ibm.com/support/entry/portal/Troubleshooting/Hardware/System_Storage/Disk_systems/Enterprise_Storage_Servers/XIV_Storage_System_282810_281229/)