

System Cluster 1350

Release Notes for June 2008 Release

This document applies to IBM System Cluster 1350 configurations that include one of the following switch components. (Refer to the CPOM report in the pouch in the management rack for component content for your installation.)


- Force10 E600 switch
- Force10 E1200 switch
- Cisco 4948 switch.

At this time, these components have not been fully approved for installation into the racks and you might need to install the component into the switch chassis.

To install these components into the switch chassis, observe the open slots in the switch chassis. Refer to the information below to install the necessary line cords, power supplies or fan modules.

Cisco 4948 switch


Locate the two power supplies in the over-pack ship-group boxes. Install the two power supplies into the switch chassis. (Two power supplies are required for each switch.)

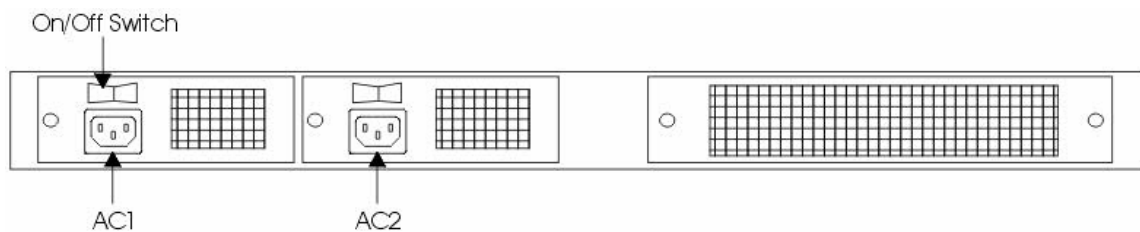

Force10 E600 and Force10 E1200

Locate the line cords, power supplies, and fan modules in the over-pack ship-group boxes. Install the power supplies and fan modules into the switch chassis. Refer to the labeling on the static-protective bag containing the line cords to attach the cord to the appropriate switch chassis.

E600

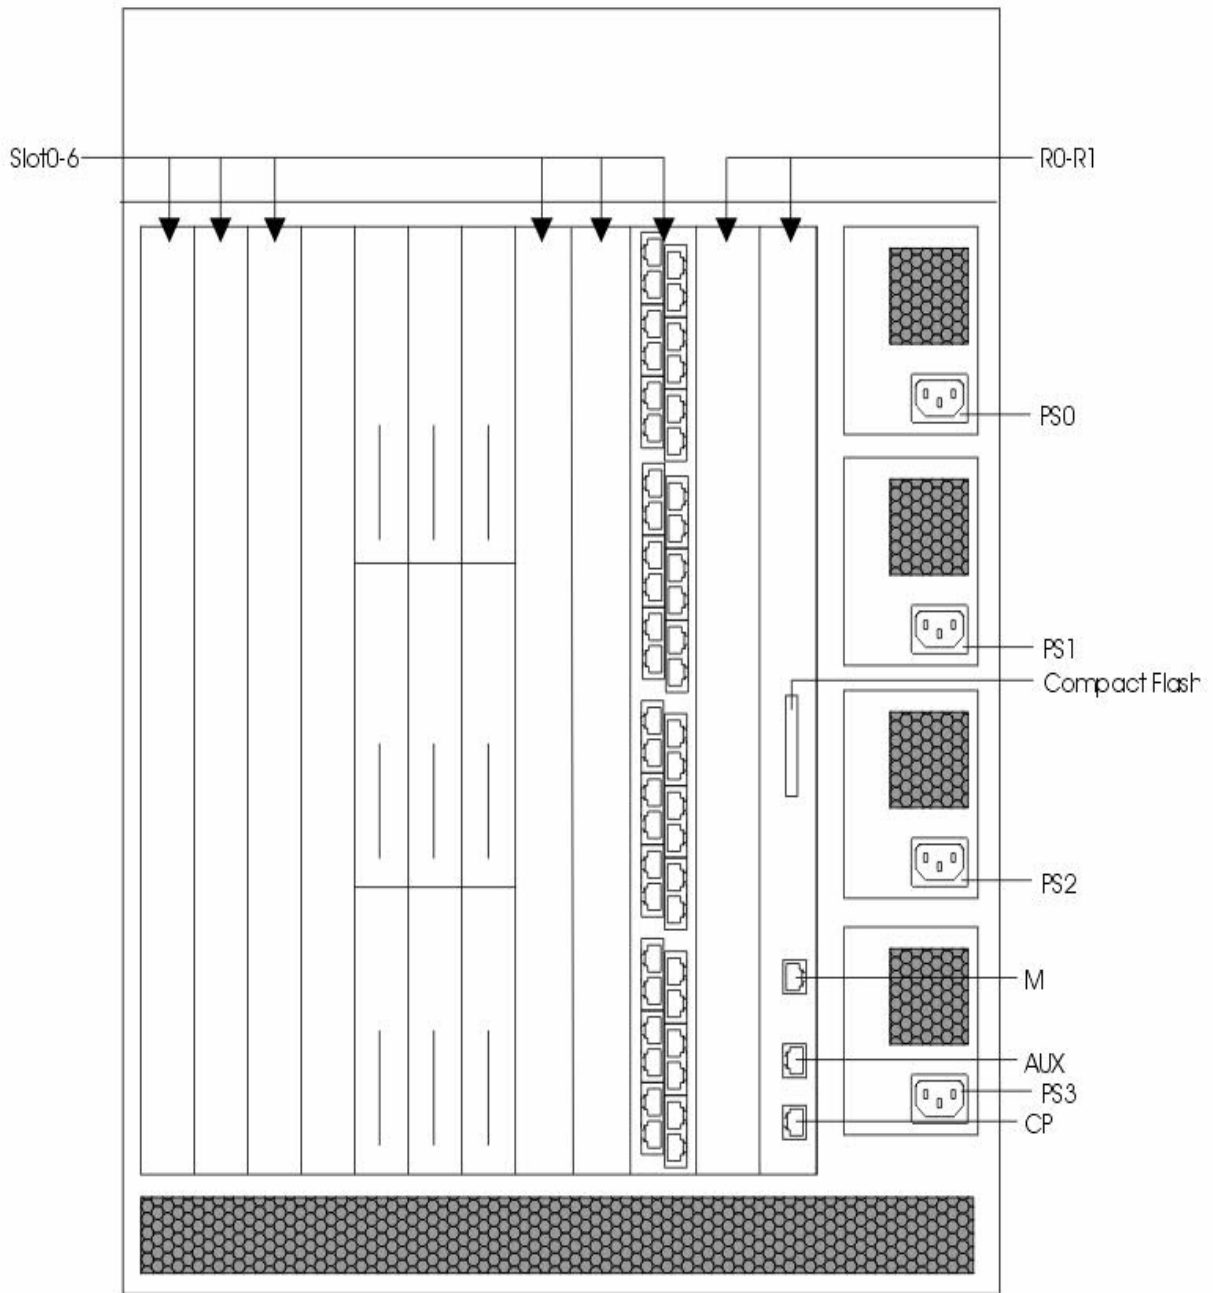

E1200

